
Two contemporary Door Knobs - in smooth and linear textures, both available in four sizes designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4. Matching Cabinet Knobs are available, see section CF1.





approx actual size B

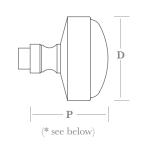



Fixings

Supplied with $8\mathrm{mm} \ge 110\mathrm{mm}$ stainless steel lockpoint spindle and M6 grubscrew (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

How to Order

Split Finish Sets -

7679

7680

1) select KNOB (e.g. 7679)

PLEASE NOTE: To work with Sprung Rosettes, the Knob needs to be machined to fit and 'SPG' must be added to the code eg. 7679SPG/...

- 2) add FINISH (e.g. 7679**PC**)
- 3) add SIZE (e.g. 7679PC/**B**)

For HALF SET (single knob) add /H(e.g. 7679PC/B**/H**).


Backplates and Rosettes ordered separately - see sections ST3 and ST4.

Finishes - See our price list or website for finish availability.



	A	В	С	D
D (diameter)	Ø 48	Ø 54	Ø 64	Ø 75
P (projection)	55*	57*	59*	62*



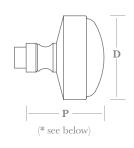

* total projection: add rosette or backplate thickness including collar.

Two contemporary Door Knobs - in square and diamond mesh textures, both available in four sizes - designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.


Matching Cabinet Knobs are available, see section CF1.









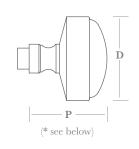

Fixings

Supplied with $8 \text{mm} \ge 110 \text{mm}$ stainless steel lockpoint spindle and M6 grubscrew (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

How to Order

Split Finish Sets -

1) select KNOB (e.g. **7681**)

PLEASE NOTE: To work with Sprung Rosettes, the Knob needs to be machined to fit and 'SPG' must be added to the code eg. 7681SPG/...

2) add FINISH (e.g. 7681**PC**)

3) add SIZE (e.g. 7681PC/B)

For HALF SET (single knob) add /H (e.g. 7681PC/B**/H**).

Backplates and Rosettes ordered separately - see sections ST3 and ST4.

Finishes - See our price list or website for finish availability.





approx actual size B


7682

7681

	Α	В	С	D
D (diameter)	Ø 48	Ø 54	Ø 64	Ø 75
P (projection)	55*	57*	59*	62*



7682B with **7821B** rosette

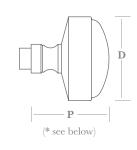

* total projection: add rosette or backplate thickness including collar.

Two traditional period Door Knobs - both available in three sizes - designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.


Complementary Thumb Turns can be found in section ST7, and Cabinet Knobs in section CF1.







7620B with **6000B** plate

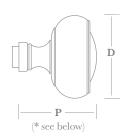




7620C with **7820C** rosette



^ 7625B with **8700B** plate

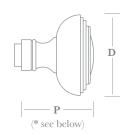



△ **7625C** with **7823C** rosette

Fixings

Supplied with $8 \, \mathrm{mm} \times 110 \, \mathrm{mm}$ stainless steel lockpoint spindle and M6 grubscrew (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

How to Order

Split Finish Sets order as singles

- 1) select KNOB (e.g. **7620**)
- 2) add FINISH (e.g. 7620**PC**)
- 3) add SIZE (e.g. 7620PC/**B**)

For HALF SET (single knob) add /H (e.g. 7620PC/B/H).

Backplates and Rosettes ordered separately - see sections ST3 and ST4.

Finishes - See our price list or website for finish availability.



7625


7620

	Α	В	С
D (diameter)	Ø 51	Ø 56	Ø 63
P (projection)	48*	52*	59*

Two classic Door Knobs - both available in four sizes - designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.


Complementary Thumb Turns can be found in section ST7, and Cabinet Knobs in section CF1.



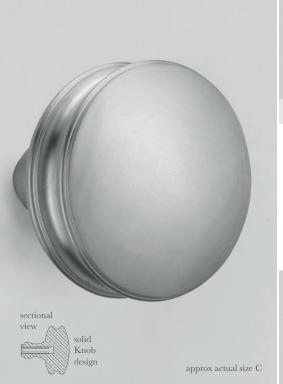




7650B with **5900B** plate

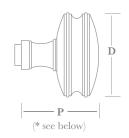



7650C with **7841C** rosette

7651B with **5900B** plate

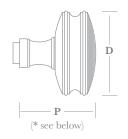



7651C with **7827C** rosette

Fixings

Supplied with $8 \text{mm} \times 110 \text{mm}$ stainless steel lockpoint spindle and M6 grubscrew (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

How to Order

Split Finish Sets -order as singles

- 1) select KNOB (e.g. **7650**)
- 2) add FINISH (e.g. 7650**PC**)
- 3) add SIZE (e.g. 7650PC ${m/B}$)

For HALF SET (single knob) add /H (e.g. 7650PC/B/H).

Backplates and Rosettes ordered separately - see sections ST3 and ST4.

Finishes - See our price list or website for finish availability.




7	6	h	-1
	v	J	_

7650

	A	В	C	D
D (diameter)	Ø 48	Ø 54	Ø 64	Ø 75
P (projection)	44*	53*	59*	65*

Two contemporary Door Knobs - both available in three sizes designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4. Complementary Thumb Turns can be found in section ST7, and Cabinet Knobs in section CF1.



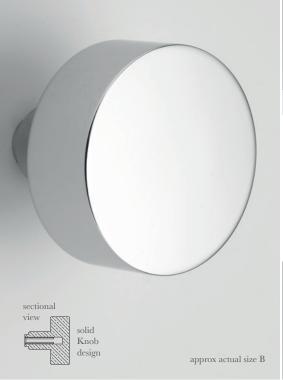


7628

7629



7628B with **4900C** plate





7628B with 7843C rosette

7629B with **5900C** plate

(* see below)

Fixings

Supplied with $8 \text{mm} \times 110 \text{mm}$ stainless steel lockpoint spindle and M6 grubscrew (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

How to Order


Split Finish Sets -order as singles

- 1) select KNOB (e.g. **7628**)
- 2) add FINISH (e.g. 7628**PC**)
- 3) add SIZE (e.g. 7628PC ${m/B}$)

For HALF SET (single knob) add /H (e.g. 7628PC/B**/H**).

Backplates and Rosettes ordered separately - see sections ST3 and ST4.

Finishes - See our price list or website for finish availability.

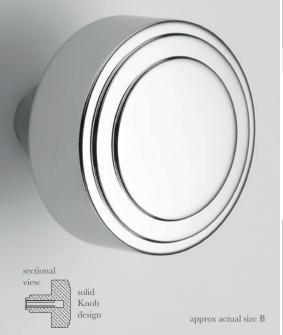





7629B with **7842C** rosette

В C D (diameter) Ø 56 Ø 63 Ø 75 P (projection)

Two contemporary Door Knobs both available in three sizes - designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.


Complementary Thumb Turns can be found in section ST7, and Cabinet Knobs in section CF1.







7630B with **5900C** plate

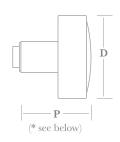



7630B with **7842C** rosette

Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grubscrew (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

How to Order


Split Finish Sets order as singles

- 1) select KNOB (e.g. **7630**)
- 2) add FINISH (e.g. 7630**PC**)
- 3) add SIZE (e.g. 7630PC/**B**)

For HALF SET (single knob) add /H (e.g. 7630PC/B**/H**).


Backplates and Rosettes ordered separately - see sections ST3 and ST4.

Finishes - See our price list or website for finish availability.

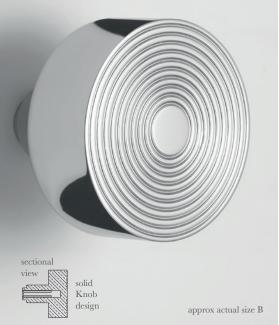


7632


7630





7632B with **4900C** plate





△ **7632B** with **7843C** rosette

Two classic Art Deco period Door Knobs designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.


Complementary Thumb Turns can be found in section ST7, and Cabinet Knobs in section CF1.







7668 with **6700B** plate

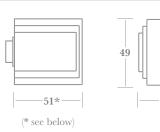



7668 with **7842B** rosette

Fixings

Supplied with $8\,\mathrm{mm}\,\mathrm{x}\,110\,\mathrm{mm}$ stainless steel lockpoint spindle and M6 grubscrew (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

How to Order

Split Finish Sets order as singles

1) select KNOB design (e.g. **7668**)

2) add FINISH (e.g. 7668**PC**)

For HALF SET (single knob) add /H (e.g. 7668PC/**H**).


Backplates and Rosettes ordered separately - see sections ST3 and ST4.

Finishes - See our price list or website for finish availability.



7669 (round edge design)



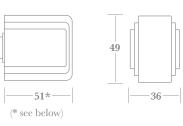



7669 with **7842B** rosette

^{*} total projection: add 7mm for rosette & 6mm for backplate. Knob design not suitable for use with backplates fitted with raised collars.

Two classic 1960's period Door Knobs designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.

Complementary Thumb Turns can be found in section ST7, and Cabinet Knobs in section CF1.



Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grubscrew (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

How to Order

Split Finish Sets order as singles

l) select KNOB (e.g. 7660)

2) add FINISH (e.g. 7660**PC**)

For HALF SET (single knob) add /H (e.g. 7660PC/**H**).

Backplates and Rosettes ordered separately - see sections ST3 and ST4.

•••••

Finishes - See our price list or website for finish availability.




7660

7661




7660 with **5900B** plate

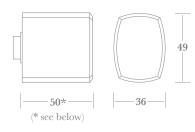




7660 with **7842B** rosette

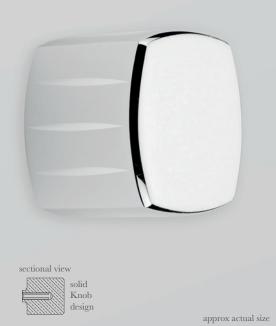



7661 with **5900B** plate

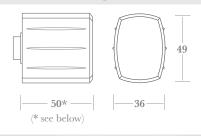




7661 with **7842B** rosette

* total projection: add 7mm for rosette & 6mm for backplate. Knob design not suitable for use with backplates fitted with raised collars.

Two traditional period Door Knobs designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.


Complementary Thumb Turns can be found in section ST7, and Cabinet Knobs in section CF1.



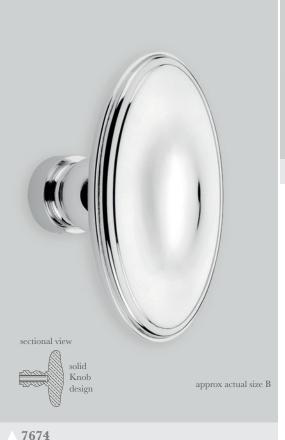



7674B with **7846B** rosette

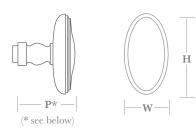

	A	В
HxW	68 x 37	76 x 42
P (projection)	52	55

Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grubscrew (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

How to Order

Split Finish Sets order as singles

- 1) select KNOB (e.g. **7665**)
- 2) add FINISH (e.g. 7665**PC**)
- 3) add SIZE (e.g. 7665PC/**B**)

For HALF SET (single knob) add /H (e.g. 7665PC/B**/H**).


For half set (single knob) as exterior pairing with a CREMONE BOLT add CM to code (e.g. 7674PC/A//**CM**) - see DB3:200..

Backplates and Rosettes ordered separately - see sections ST3 and ST4.

Finishes - See our price list or website for finish availability.




7665





7665A with **5900B** plate





7665A with **7822B** rosette

One contemporary and one classic 1950's period Door Knob - both designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.


Complementary Thumb Turns can be found in section ST7, and Cabinet Knobs in section CF1.







7667 with **5900B** plate

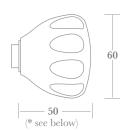



△ **7667** with **7845B** rosette

approx actual size

Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grubscrew (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

How to Order

Split Finish Sets order as singles

1) select KNOB (e.g. **7667**)

2) add FINISH (e.g. 7667**PC**)

For HALF SET (single knob) add /H (e.g. 7667PC/**H**).

Backplates and Rosettes ordered separately - see sections ST3 and ST4.


Finishes - See our price list or website for finish availability.



7672



△ **7672** with **6000B** plate

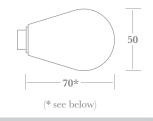



7672 with **7842B** rosette

One contemporary and one traditional period Door Knob - both designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.


Complementary Thumb Turns can be found in section ST7, and Cabinet Knobs in section CF1.







7666 with **4950B** plate

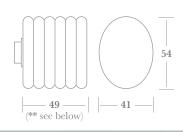



7666 with **7843B** rosette

Fixings

Supplied with $8 \text{mm} \times 110 \text{mm}$ stainless steel lockpoint spindle and M6 grubscrew (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.



Split Finish Sets order as singles

- 1) select KNOB (e.g. **7694**)
- 2) add FINISH (e.g. 7694**PC**)
- 3) 7694 add SIZE (e.g. 7694PC ${m/B}$)

For HALF SET (single knob) add /H (e.g. 7694PC/B/H).

Backplates and Rosettes ordered separately - see sections ST3 and ST4.

Finishes - See our price list or website for finish availability.




7694

7666





7694B with **6000B** plate

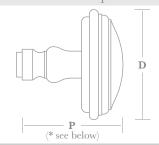





7694B with **7846B** rosette

- * total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.
- ** Knob design not suitable for use with backplates fitted with raised collars.

One traditional period, and one classic contemporary Octagonal Door Knob - both designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.


Complementary Thumb Turns can be found in section ST7, and Cabinet Knobs in section CF1.

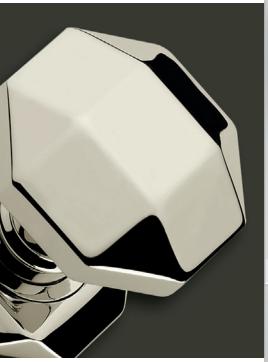

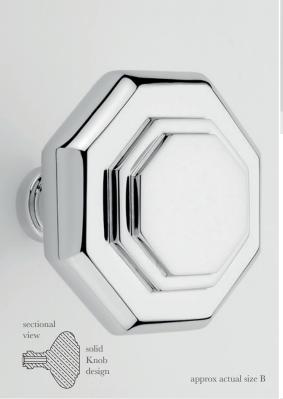



7637A with **7837B** rosette

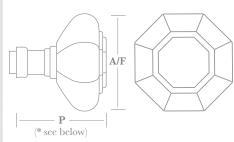

7637	A	В
A/F (across flats)	57	69
P (projection)	55	64

A/F = dimension across flats

Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grubscrew (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

How to Order

Split Finish Sets order as singles


- 1) select KNOB (e.g. **7637**)
- 2) add FINISH (e.g. 7637**PC**)
- 3) add SIZE (e.g. 7637PC/B).

For HALF SET (single knob) add /H (e.g. 7637PC/B**/H**).

For half set (single knob) as exterior pairing with a CREMONE BOLT add CM to code (e.g. 7637PC/B/CM) - see DB3:200.


Backplates and Rosettes ordered separately - see sections ST3 and ST4.

Finishes - See our price list or website for finish availability.

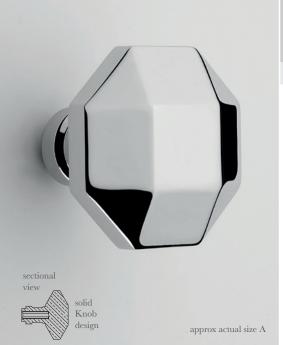



△ **7624A** with **7824A** rosette

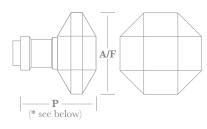

7624	Α	В	С
A/F (across flats)	53	60	70
P (projection)	49	52	56

A/F = dimension across flats

7624

7637

^{*} total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

One Art Deco and one Domed Oval Door Knob - both designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.


Complementary Thumb Turns can be found in section ST7, and Cabinet Knobs in section CF1.







7631 with **6600B** plate

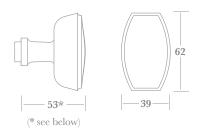



7631 with **7826** plate

Fixings

Supplied with $8\,\mathrm{mm}\,\mathrm{x}\,110\,\mathrm{mm}$ stainless steel lockpoint spindle and M6 grubscrew (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

How to Order

Split Finish Sets order as singles

7657

l) select KNOB (e.g. 7631)


2) add FINISH (e.g. 7631**PC**)

For HALF SET (single knob) add /H (e.g. 7631PC/**H**).

For half set (single knob) as exterior pairing with a CREMONE BOLT add CM to code (e.g. 7631PC/CM) - see DB3:200.


Backplates and Rosettes ordered separately - see sections ST3 and ST4.

Finishes - See our price list or website for finish availability.

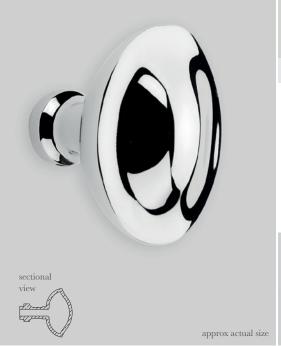



△ **7657** with **5951B** plate

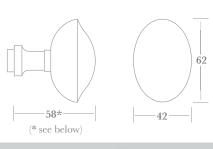



7657 with **7827B** rosette

Two traditional period Door Knobs both available in two sizes - designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.


Complementary Thumb Turns can be found in section ST7, and Cabinet Knobs in section CF1.







7648B with **5951B** plate

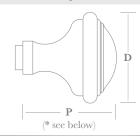



7648B with **7834B** rosette



Supplied with $8 \text{mm} \times 110 \text{mm}$ stainless steel lockpoint spindle and M6 grubscrew (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.



Split Finish Sets -order as singles

- 1) select KNOB (e.g. **7619**)
- 2) add FINISH (e.g. 7619**PC**)
- 3) add SIZE (e.g. 7619PC ${m/B}$)

For HALF SET (single knob) add /H (e.g. 7619PC/B/H).

Backplates and Rosettes ordered separately - see sections ST3 and ST4.

Finishes - See our price list or website for finish availability.





7648

design


approx actual size B

7619

		D (diameter)	P (projection)
7640	А	Ø 54	52*
7648	В	Ø 60	62*
	Α	Ø 50	47*
7619	В	Ø 57	52*
	С	Ø 63	57*



7619B with **7848B** rosette

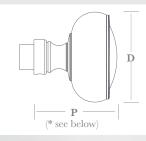



7619B with **7849B** rosette

Two traditional period Door Knobs - both available in two sizes - designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.

Complementary Thumb Turns can be found in section ST7, and Cabinet Knobs in section CF1.



Fixings

Supplied with $8 \text{mm} \times 110 \text{mm}$ stainless steel lockpoint spindle and M6 grubscrew (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

How to Order

Split Finish Sets -order as singles

- 1) select KNOB (e.g. **7636**)
- 2) add FINISH (e.g. 7636**PC**)
- 3) add SIZE (e.g. 7636PC ${m/B}$)

For HALF SET (single knob) add /H (e.g. 7636PC/B**/H**).

Backplates and Rosettes ordered separately - see sections ST3 and ST4.

Finishes - See our price list or website for finish availability.

















7622A with **7822B** rosette

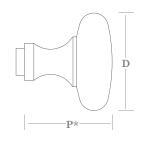




7636A with **7838B** rosette

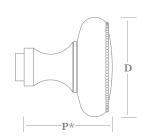



7635A with **7822B** rosette

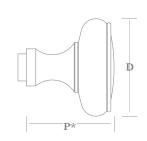



7635

	Α	В
D (diameter)	Ø 57	Ø 63
P (projection)	51*	52*

Two traditional period Door Knobs - both available in four sizes - designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.


Complementary Thumb Turns can be found in section ST7, and Cabinet Knobs in section CF1.







7634B with **5900B** plate

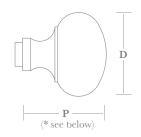



7634B with **7834B** rosette

Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grubscrew (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.




Split Finish Sets order as singles

- 1) select KNOB (e.g. **7638**)
- 2) add FINISH (e.g. 7638**PC**)
- 3) add SIZE (e.g. 7638PC/**B**)

For HALF SET (single knob) add /H (e.g. 7638PC/B**/H**).

Backplates and Rosettes ordered separately - see sections ST3 and ST4.

Finishes - See our price list or website for finish availability.

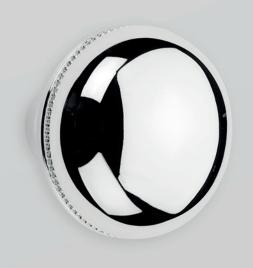




approx actual size B


7638

7634





7638B with **4700B** plate

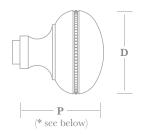



7638B with **7838B** rosette

Two traditional period Door Knobs - both available in four sizes - designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4. Complementary Thumb Turns can be found in section ST7, and Cabinet Knobs in section CF1.



Supplied with $8 \text{mm} \times 110 \text{mm}$ stainless

- see pages ST6:070 & 080. Installation instructions supplied.

How to Order 1) select KNOB (e.g. **7645**) 2) add FINISH (e.g. 7645**PC**)

(e.g. 7645PC/B**/H**).

3) add SIZE (e.g. 7645PC/**B**) For HALF SET (single knob) add /H

Backplates and Rosettes ordered separately - see sections ST3 and ST4.

steel lockpoint spindle and M6 grubscrew


Split Finish Sets -order as singles

Fixings






7641B with **4950B** plate

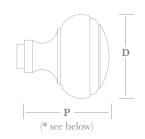




7641B with **7834B** rosette

7645B with **5951B** plate

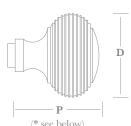



(64mm max. door thickness); alternative spindle lengths and functions are available

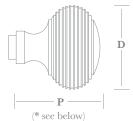

7641



7645

approx actual size B

Finishes - See our price list or website for finish availability.

	AA	A	В	С
D (diameter)	Ø 44	Ø 51	Ø 57	Ø 63
P (projection)	45*	51*	56*	61*

* total projection: add 7mm for rosette, 6mm for
backplate with flush collar & 10mm for plate
with raised collar.

7645B with **7827B** rosette

Three traditional period Door Knobs designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.

Complementary Thumb Turns can be found in section ST7, and Cabinet Knobs in section CF1.



Fixings

Supplied with $8 \text{mm} \times 110 \text{mm}$ stainless steel lockpoint spindle and M6 grubscrew (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

How to Order

Split Finish Sets -

1) select KNOB (e.g. **7623**)

PLEASE NOTE: To work with Sprung Rosettes, the Knob needs to be machined to fit and 'SPG' must be added to the code eg. 7623SPG/...

2) add FINISH (e.g. 7623**PC**)

For HALF SET (single knob) add /H (e.g. 7623PC/H).


Backplates and Rosettes ordered separately - see sections ST3 and ST4.


Finishes - See our price list or website for finish availability.





7614 with **7821B** rosette

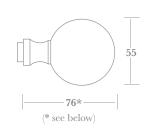


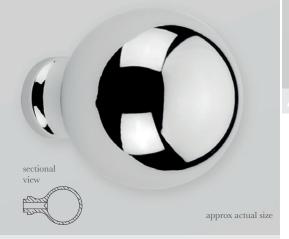


7623




7623 with **7841B** rosette

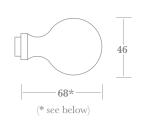

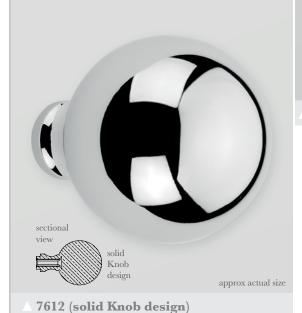



7612 with **7821B** rosette

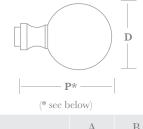

	А	В
D (diameter)	Ø 48	Ø 55
P (projection)	69*	76*

^{*} total projection: add rosette or backplate thickness including collar.

Three traditional period Door Knobs designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.

Complementary Thumb Turns can be found in section ST7, and Cabinet Knobs in section CF1.



Fixings

Supplied with $8 \text{mm} \times 110 \text{mm}$ stainless steel lockpoint spindle and M6 grubscrew (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

How to Order

Split Finish Sets -

1) select KNOB (e.g. **7627**)


PLEASE NOTE: To work with Sprung Rosettes, the Knob needs to be machined to fit and 'SPG' must be added to the code eg. 7627SPG/...

2) add FINISH (e.g. 7627**PC**)


For HALF SET (single knob) add /H (e.g. 7627PC/H).


Backplates and Rosettes ordered separately - see sections ST3 and ST4.

Finishes - See our price list or website for finish availability.

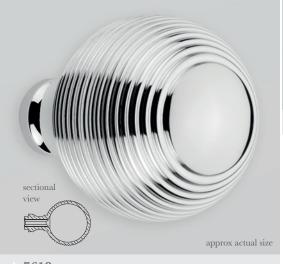



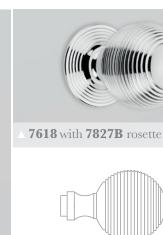

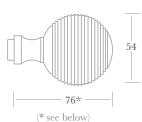





7627



7627 with **7841B** rosette

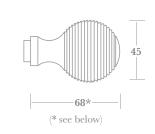


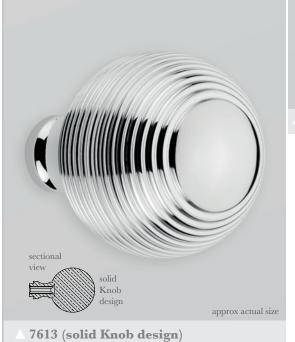

* total projection: add rosette or backplate thickness including collar.




7613 with **7827B** rosette

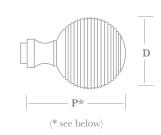

	Α	В
D (diameter)	Ø 48	Ø 55
P (projection)	69*	76*

Two Oval Door Knobs designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.


Complementary Thumb Turns can be found in section ST7, and Cabinet Knobs in section CF1.

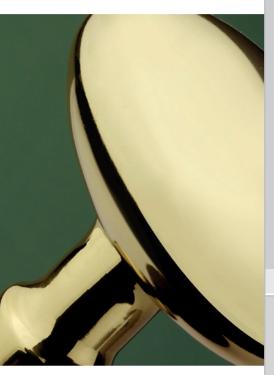






7616 with **6000B** plate







7616 with **7846B** rosette

Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grubscrew (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.



Split Finish Sets order as singles

- 1) select KNOB (e.g. **7621**)
- 2) add FINISH (e.g. 7621**PC**)

For HALF SET (single knob) add /H (e.g. 7621PC/**H**).

For half set (single knob) as exterior pairing with a CREMONE BOLT add CM to code (e.g. 7621PC/CM) - see DB3:200.

Backplates and Rosettes ordered separately - see sections ST3 and ST4.


Finishes - See our price list or website for finish availability.



7621



△ **7621** with **6000B** plate

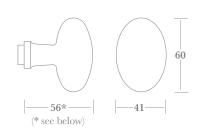




7621 with **7847B** rosette

^{*} total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

One 1950's inspired, and one traditional period, Door Knob - both designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.


Complementary Thumb Turns can be found in section ST7, and Cabinet Knobs in section CF1.



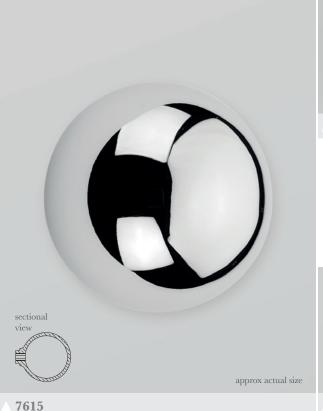



7615 with **5900B** plate

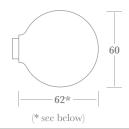



7615 with **7845B** rosette

Fixings

Supplied with $8 \text{mm} \times 110 \text{mm}$ stainless steel lockpoint spindle and M6 grubscrew (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

How to Order

Split Finish Sets -order as singles


- 1) select KNOB (e.g. **7615**)
- 2) add FINISH (e.g. 7615**PC**)
- 3) 7653 add SIZE (e.g. 7653PC $\hspace{-3pt}/\hspace{-3pt}\boldsymbol{B})$

For HALF SET (single knob) add /H (e.g. 7615PC/H).

Backplates and Rosettes ordered separately - see sections ST3 and ST4.


Finishes - See our price list or website for finish availability.







7653B with **5900B** plate

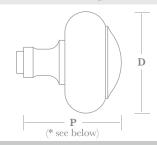



7653B with **7834B** rosette