


# Door Levers

Two classic 1960's inspired Door Levers designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.

Complementary Thumb Turns can be found in section ST7.

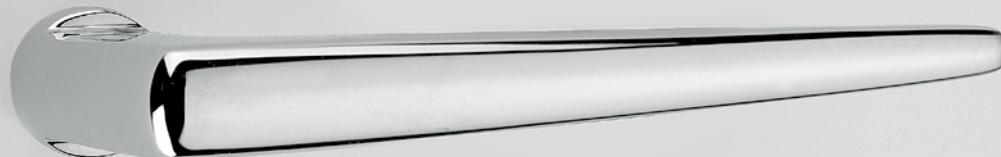




**▲ 7741**

▲ with 49 series multipoint plate

▲ shown with **7844B** rosette

RH shown

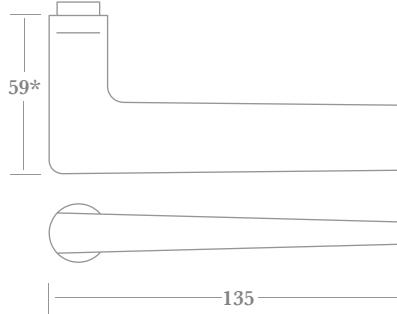

\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

## Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grub screw (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

## How to Order

Split Finish Sets - order as singles

1) select LEVER (e.g. **7741**)

2) add FINISH (e.g. **7741PC**)

If single lever only required add HANDING (e.g. **7741PC/RH**).

For single lever as exterior pairing with a CREMONE BOLT add CM to code (e.g. **7741PC/CM**) - see DB3:200.

Backplates and Rosettes ordered separately - see sections ST3 and ST4.

**Finishes** - See our price list or website for finish availability.




**▲ 7742**

▲ with 49 series multipoint plate

▲ shown with **7845B** rosette


RH shown

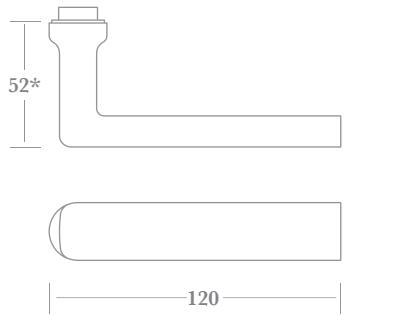

\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

# Door Levers

Two Art Deco inspired contemporary Door Levers designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4. Complementary Thumb Turns can be found in section ST7.

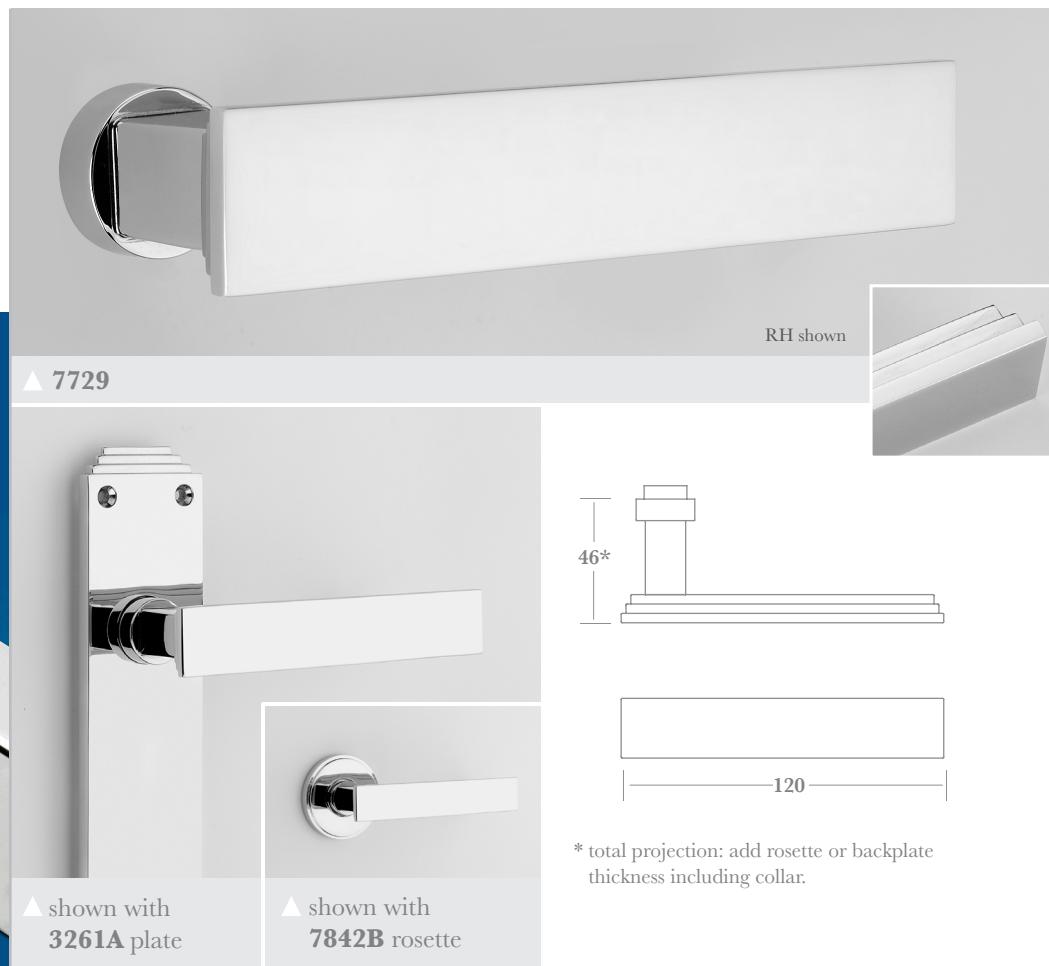

## Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grub screw (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

## How to Order

Split Finish Sets - order as singles

1) select LEVER (e.g. 7728)

**PLEASE NOTE:** To work with Sprung Rosettes, the Lever needs to be machined to fit and 'SPG' must be added to the code eg. 7728SPG/...

2) add FINISH (e.g. 7728PC)

If single lever only required add HANDING (e.g. 7728PC/RH).

For single lever as exterior pairing with a CREMONE BOLT add CM to code (e.g. 7728PC/CM) - see DB3:200.

Backplates and Rosettes ordered separately - see sections ST3 and ST4.


**Finishes** - See our price list or website for finish availability.



# Door Levers

Four classic Art Deco period Door Levers designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.

Complementary Thumb Turns can be found in section ST7.

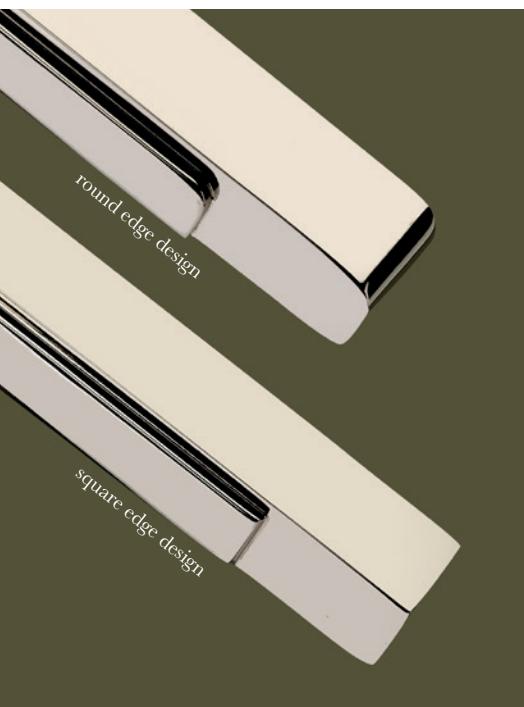

## Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grub screw (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

## How to Order

Split Finish Sets - order as singles


- 1) select LEVER design (e.g. **7734**)
- 2) add FINISH (e.g. **7734PC**)

If single lever only required add HANDING (e.g. **7734PC/RH**).

For single lever as exterior pairing with a CREMONE BOLT add CM to code (e.g. **7734PC/CM**) - see DB3:200.

Backplates and Rosettes ordered separately - see sections ST3 and ST4.

**Finishes** - See our price list or website for finish availability.

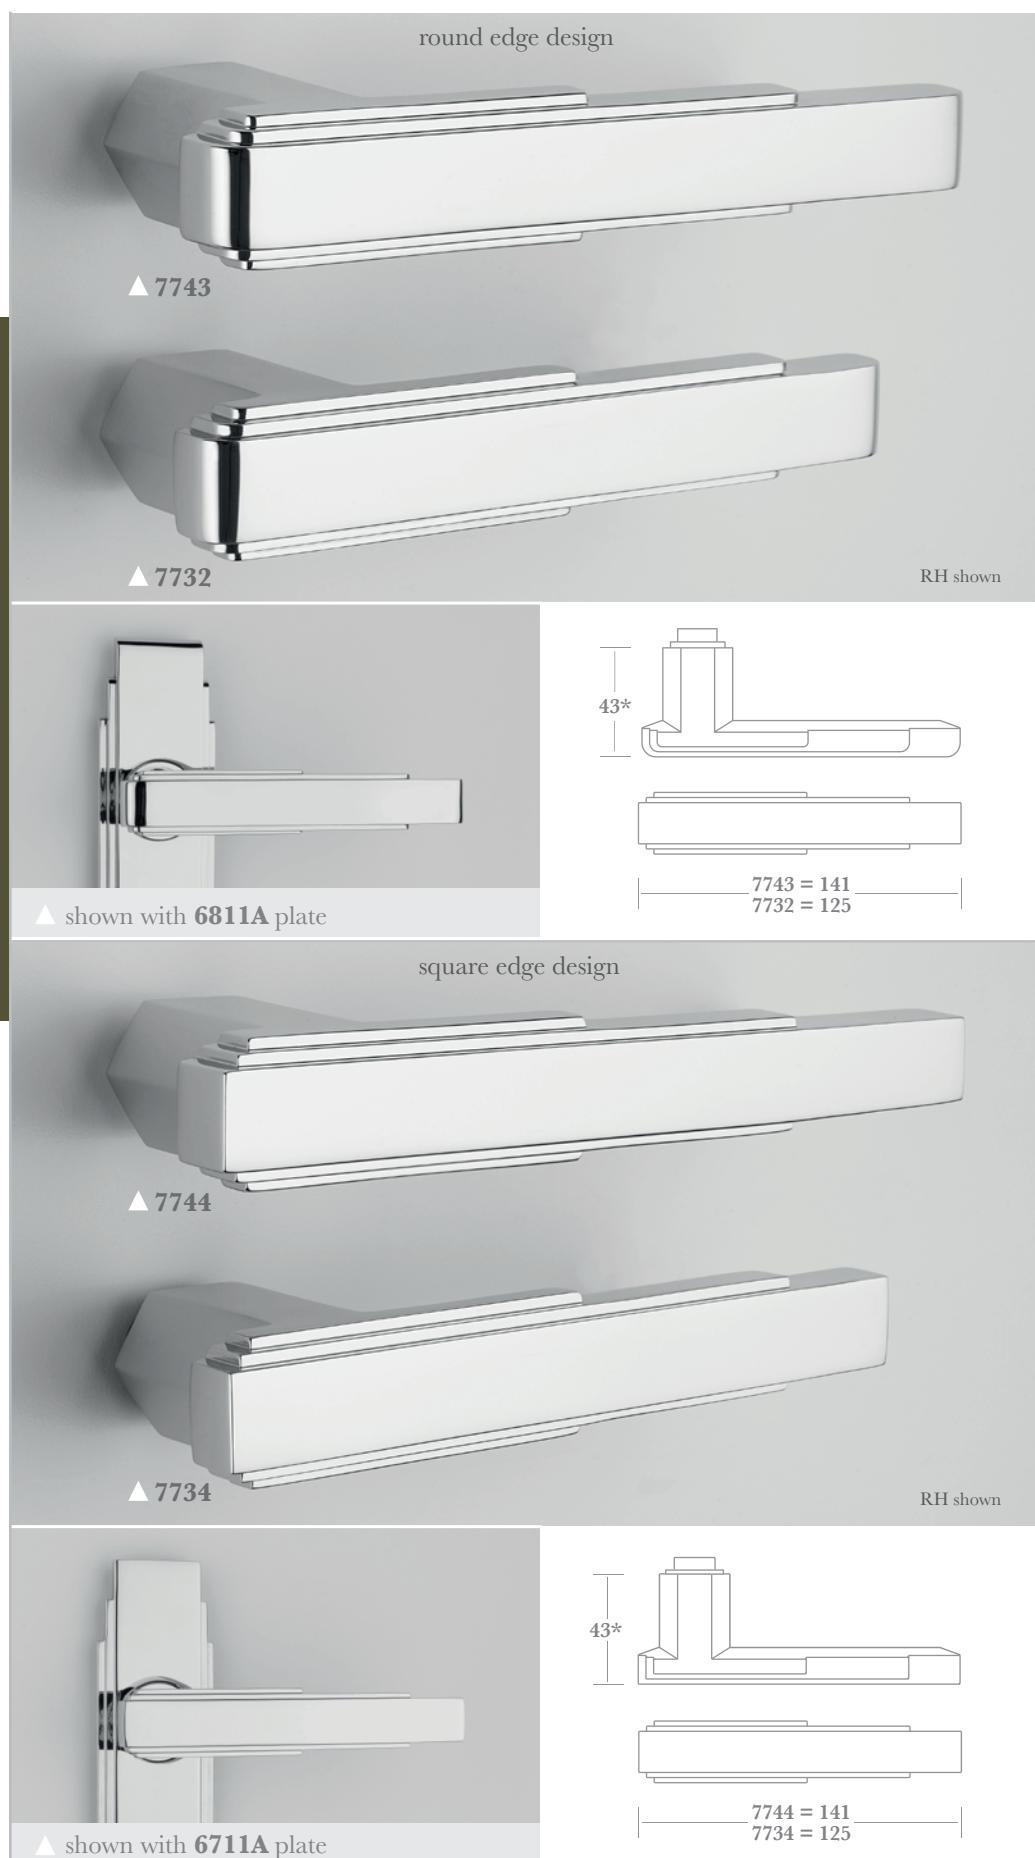

\* total projection: add 7mm for rosette & 6mm for backplate. Lever design is suitable for use with backplates fitted with either type G flush collar or type J raised collar (other raised collar designs are not recommended).

UPDATED  
06/22

ST1:030

# Door Levers

Traditional period Door Lever with rope knurled detailing designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4. Complementary Thumb Turns can be found in section ST7.




▲ 7774



▲ 7775



▲ 7764

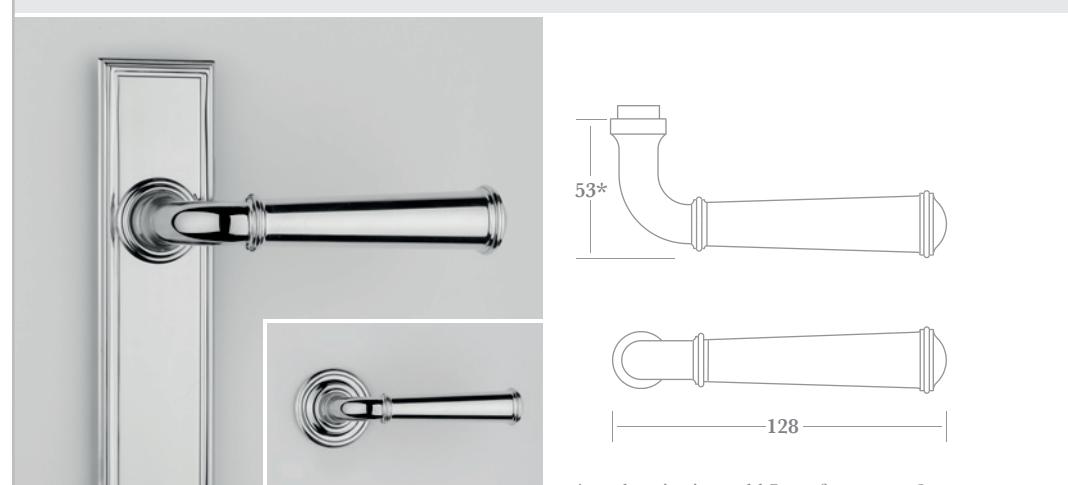

▲ 7774 shown with 6011A plate

▲ 7774 shown with 7846B rosette

\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

## Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grub screw (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

## How to Order

Split Finish Sets - order as singles

1) select LEVER (e.g. 7774)

2) add FINISH (e.g. 7774PC)

If single lever only required add HANDING (e.g. 7774PC/RH).

For single lever as exterior pairing with a CREMONE BOLT add CM to code (e.g. 7774PC/CM) - see DB3:200.

Backplates and Rosettes ordered separately - see sections ST3 and ST4.

**Finishes** - See our price list or website for finish availability.

# Door Levers

Four traditional period Door Levers designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.

Complementary Thumb Turns can be found in section ST7.



## Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grub screw (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

## How to Order

Split Finish Sets -  
order as singles

1) select LEVER (e.g. 7769)

2) add FINISH (e.g. 7769PC)

If single lever only required add  
HANDING (e.g. 7769PC/RH).

For single lever as exterior pairing with a  
CREMONE BOLT add CM to code  
(e.g. 7769PC/CM) - see DB3:200.

Backplates and Rosettes ordered  
separately - see sections ST3 and ST4.

**Finishes** - See our price list or  
website for finish availability.



▲ 7770 shown with  
6011A plate


▲ 7771 shown with  
7847B rosette

\* total projection: add 7mm for rosette,  
6mm for backplate with flush collar &  
10mm for plate with raised collar.


# Door Levers

One traditional period, and one 1960's inspired, Door Lever - both designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.

Complementary Thumb Turns can be found in section ST7.

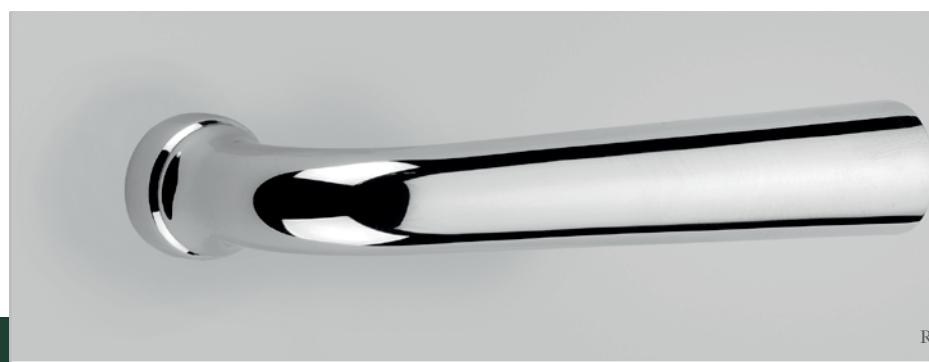

▲ 7706

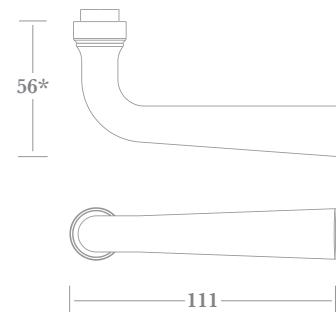

\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

## Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grub screw (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

## How to Order

Split Finish Sets - order as singles

- 1) select LEVER (e.g. 7706)
- 2) add FINISH (e.g. 7706PC)

If single lever only required add HANDING (e.g. 7706PC/RH).

For single lever as exterior pairing with a CREMONE BOLT add CM to code (e.g. 7706PC/CM) - see DB3:200.

Backplates and Rosettes ordered separately - see sections ST3 and ST4.

**Finishes** - See our price list or website for finish availability.



▲ 7773



\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

# Door Levers

Two classic 1950's period Door Levers designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.

Whilst very similar in design, the 7716 is much slimmer and lighter than its chunky and weightier brother, the 7717.



## Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grub screw (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

## How to Order

Split Finish Sets - order as singles

NB. Split Finish Sets are ordered as singles.


- 1) select LEVER (e.g. **7716**)
- 2) add FINISH (e.g. **7716PC**)

If single lever only required add HANDING (e.g. **7716PC/RH**).

For single lever as exterior pairing with a CREMONE BOLT add CM to code (e.g. **7716PC/RH/CM**) - see DB3:200.

Backplates and Rosettes ordered separately - see sections ST3 and ST4.


**Finishes** - See our price list or website for finish availability.

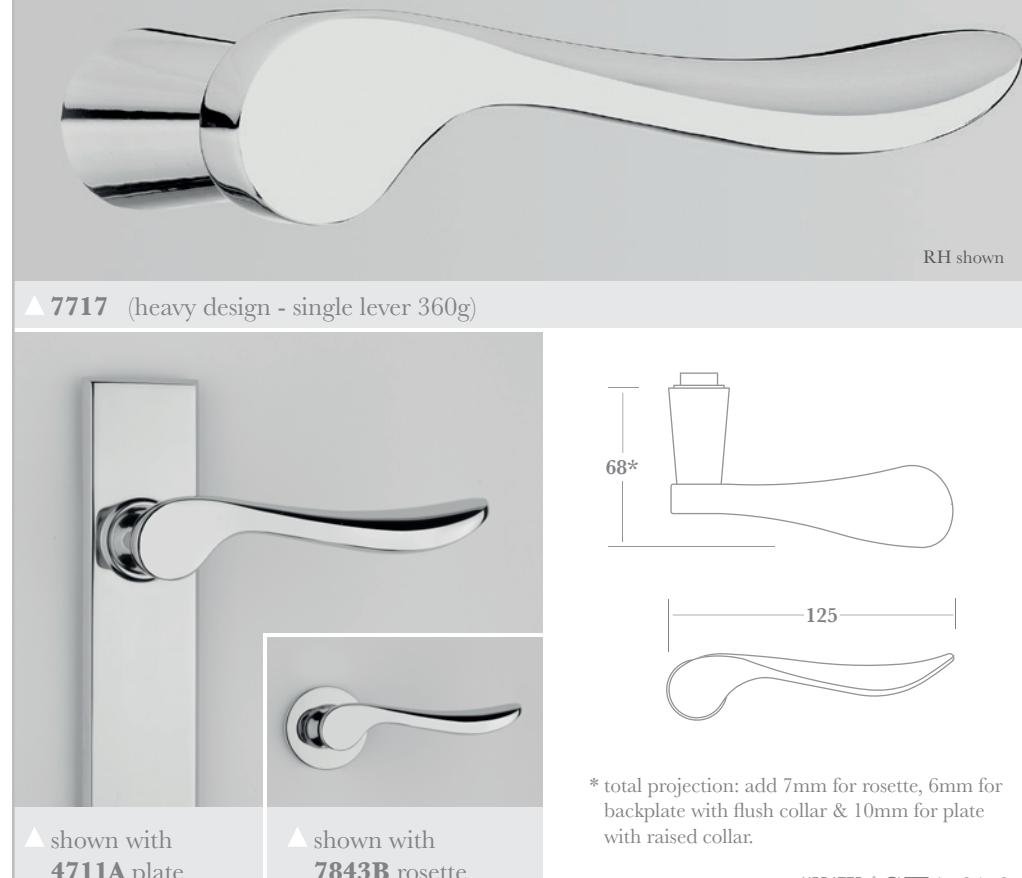

# Door Levers

Two contemporary Door Levers designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.

Complementary Thumb Turns can be found in section ST7.

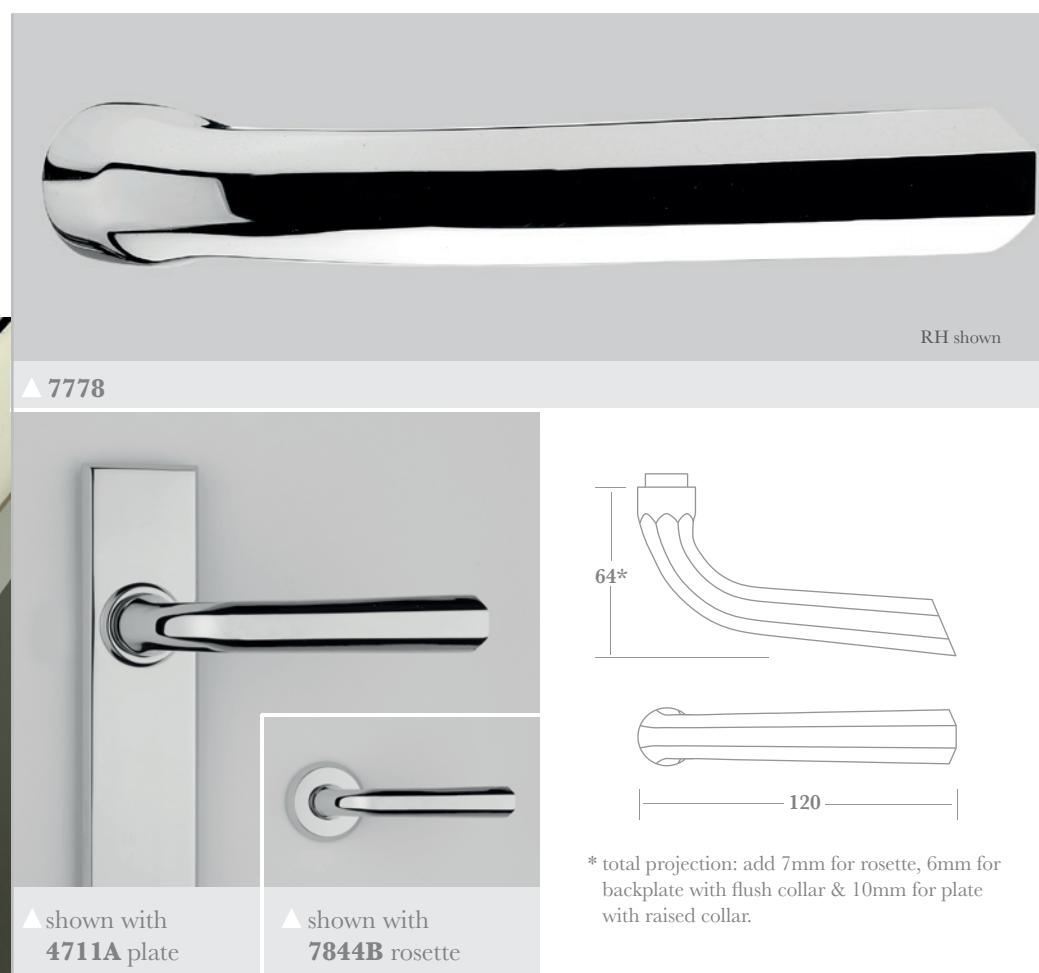

\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

## Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grub screw (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

## How to Order

Split Finish Sets -  
order as singles

1) select LEVER (e.g. **7778**)


2) add FINISH (e.g. **7778PC**)

If single lever only required add  
HANDING (e.g. **7778PC/RH**).

For single lever as exterior pairing with a  
CREMONE BOLT add CM to code  
(e.g. **7778PC/CM**) - see DB3:200.

Backplates and Rosettes ordered  
separately - see sections ST3 and ST4.

**Finishes** - See our price list or  
website for finish availability.

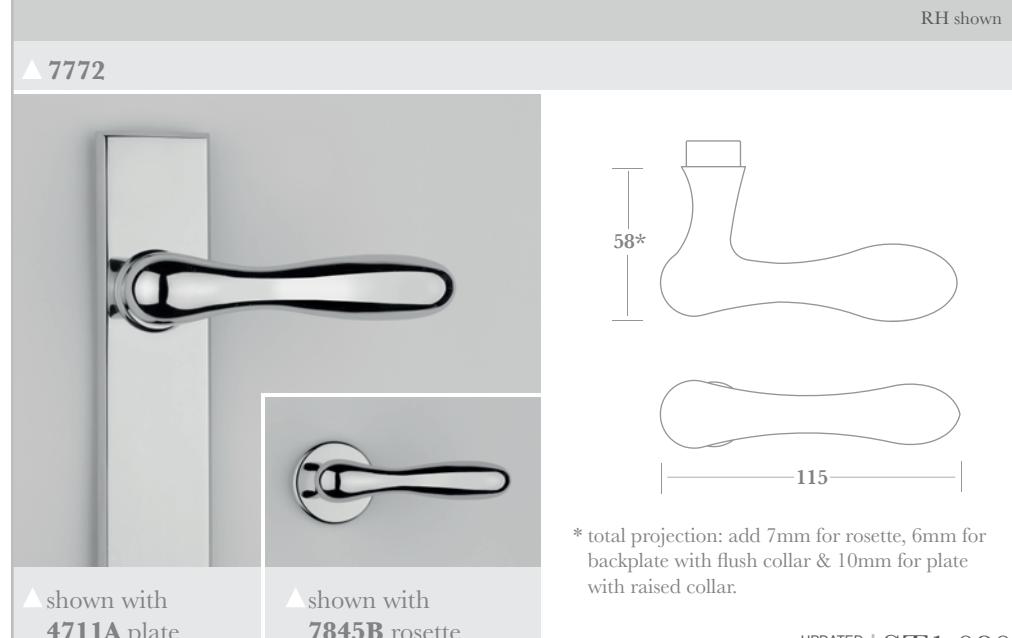


\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

# Door Levers

Two 1960's inspired Door Levers designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.

Complementary Thumb Turns can be found in section ST7.

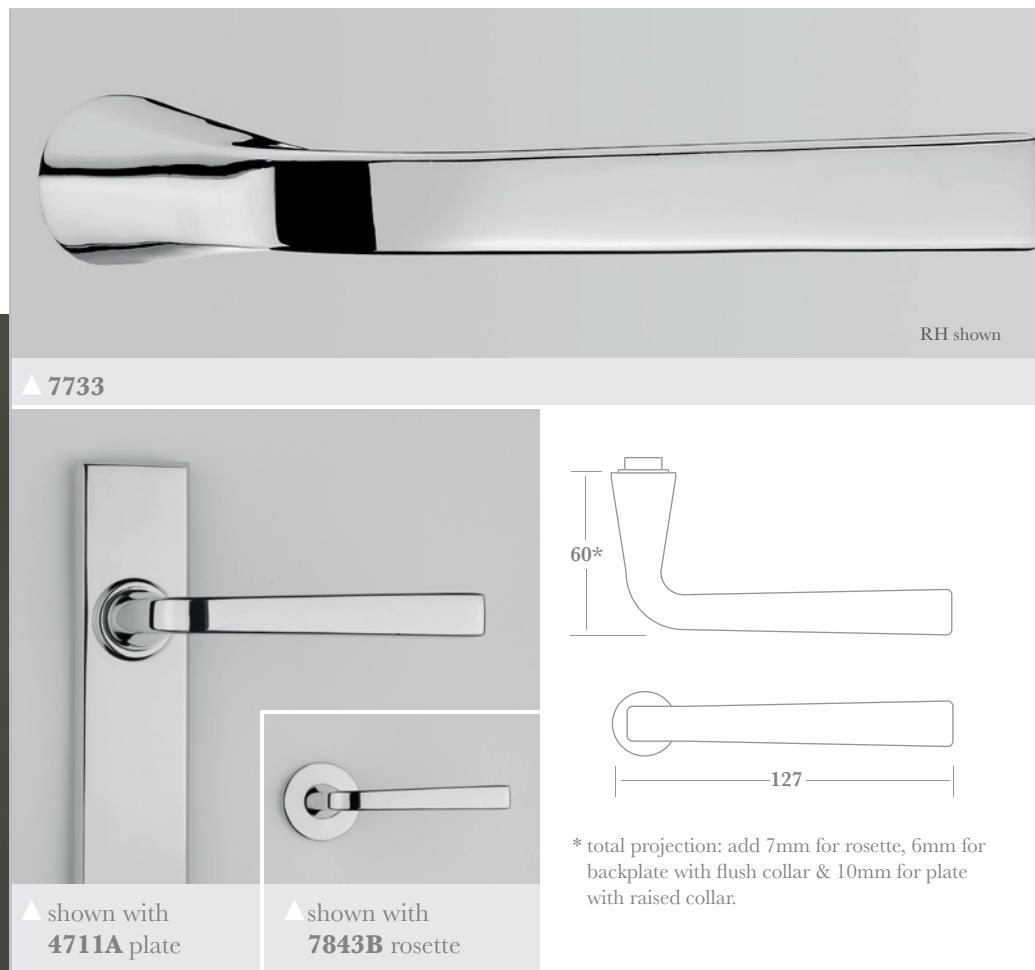

## Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grub screw (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

## How to Order

Split Finish Sets - order as singles

1) select LEVER (e.g. 7733)

2) add FINISH (e.g. 7733PC)

If single lever only required add HANDING (e.g. 7733PC/RH).

For single lever as exterior pairing with a CREMONE BOLT add CM to code (e.g. 7733PC/CM) - see DB3:200.

Backplates and Rosettes ordered separately - see sections ST3 and ST4.

**Finishes** - See our price list or website for finish availability.



# Door Levers

Two classic 1950's period Door Levers designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.

Complementary Thumb Turns can be found in section ST7.





RH shown


▲ 7710




▲ shown with  
**5911A** plate



▲ shown with  
**7844B** rosette

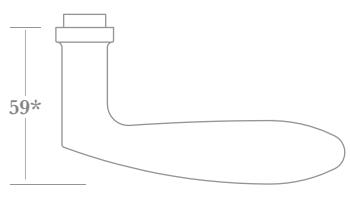

59\*

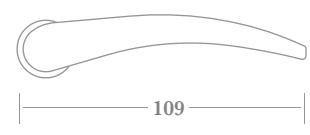

109

\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.



RH shown


▲ 7714




▲ shown with  
**4711A** plate



▲ shown with  
**7844B** rosette

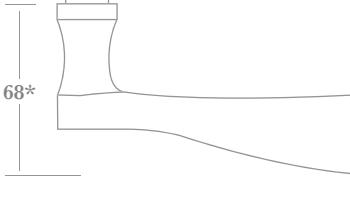

68\*

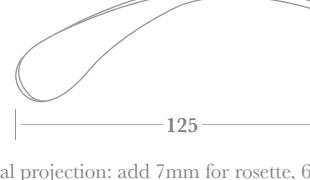

125

\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

## Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grub screw (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

## How to Order

Split Finish Sets -  
order as singles

- 1) select LEVER (e.g. **7710**)
  - 2) add FINISH (e.g. **7710PC**)
- If single lever only required add HANDING (e.g. **7710PC/RH**).
- For single lever as exterior pairing with a CREMONE BOLT add CM to code (e.g. **7710PC/RH/CM**) - see DB3:200.
- Backplates and Rosettes ordered separately - see sections ST3 and ST4.

**Finishes** - See our price list or website for finish availability.


# Door Levers

An Art Deco and a 1950's period Door Lever - designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4. Complementary Thumb Turns can be found in section ST7.



RH shown

▲ 7736

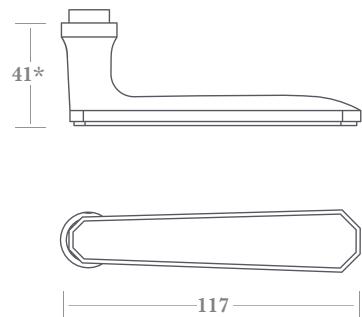▲ shown with  
6611A plate▲ shown with  
7841B rosette

\* total projection: add rosette or backplate thickness including collar.

## Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grub screw (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

## How to Order

Split Finish Sets -  
order as singles

1) select LEVER (e.g. 7736)

**PLEASE NOTE:** To work with Sprung Rosettes, the Lever needs to be machined to fit and 'SPG' must be added to the code eg. 7736SPG/...

2) add FINISH (e.g. 7736PC)

If single lever only required add HANDING (e.g. 7736PC/RH).

For single lever as exterior pairing with a CREMONE BOLT add CM to code (e.g. 7736PC/CM) - see DB3:200.


Backplates and Rosettes ordered separately - see sections ST3 and ST4.

**Finishes** - See our price list or website for finish availability.



RH shown

▲ 7740

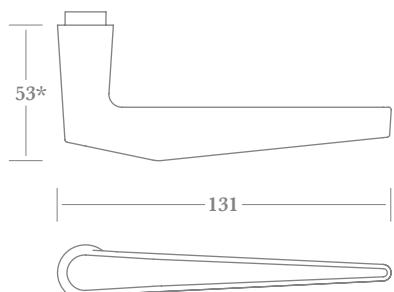▲ shown with  
5911A plate▲ shown with  
7844B rosette

\* total projection: add rosette or backplate thickness including collar.


# Door Levers

Two classic Regency Scroll Door Levers designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.

Complementary Thumb Turns can be found in section ST7.



▲ 7762

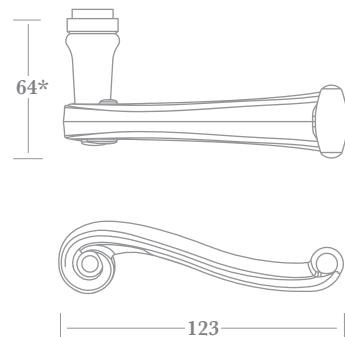

\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

## Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grub screw (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

## How to Order

Split Finish Sets - order as singles

1) select LEVER (e.g. 7767)

2) add FINISH (e.g. 7767PC).

If single lever only required add HANDING (e.g. 7767PC/RH).


For single lever as exterior pairing with a CREMONE BOLT add CM to code (e.g. 7767PC/RH/CM) - see DB3:200.

Backplates and Rosettes ordered separately - see sections ST3 and ST4.

**Finishes** - See our price list or website for finish availability.



▲ 7767

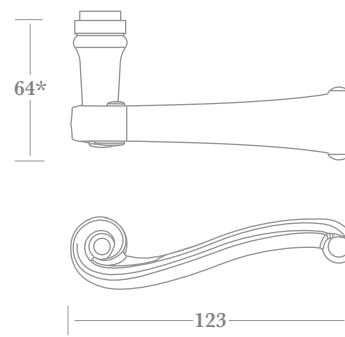


\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

# Door Levers

Two classic Edwardian Scroll Door Levers designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4. Complementary Thumb Turns can be found in section ST7.



▲ 7761

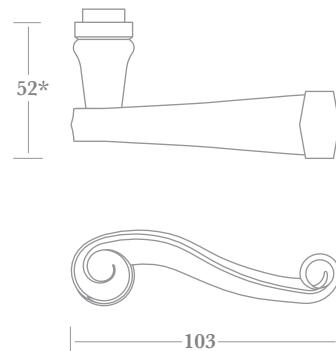

\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

## Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grub screw (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

## How to Order

Split Finish Sets - order as singles

1) select LEVER (e.g. 7766)

2) add FINISH (e.g. 7766PC)

If single lever only required add HANDING (e.g. 7766PC/RH).


For single lever as exterior pairing with a CREMONE BOLT add CM to code (e.g. 7766PC/RH/CM) - see DB3:200.

Backplates and Rosettes ordered separately - see sections ST3 and ST4.

**Finishes** - See our price list or website for finish availability.



▲ 7766

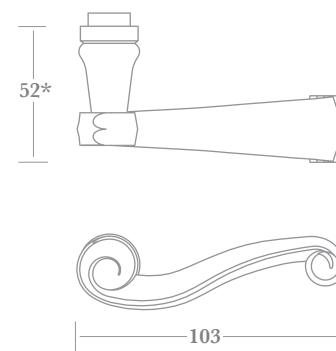

\* total projection: add 7mm for rosette, 6mm for backplate with flush collar & 10mm for plate with raised collar.

# Door Levers

Two classic Georgian Scroll Door Levers designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.

Complementary Thumb Turns can be found in section ST7.



## Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grub screw (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

## How to Order

Split Finish Sets -  
order as singles

1) select LEVER (e.g. **7720**)

2) add FINISH (e.g. **7720PC**)

If single lever only required add  
HANDING (e.g. **7720PC/RH**).

For single lever as exterior pairing with a  
CREMONE BOLT add CM to code  
(e.g. **7720PC/RH/CM**) - see DB3:200.

Backplates and Rosettes ordered  
separately - see sections ST3 and ST4.

**Finishes** - See our price list or  
website for finish availability.



# Door Lever

An Art Deco inspired Door Lever and a modern starburst Door Lever, designed to work in conjunction with the Rosettes & Backplates to be found in sections ST3 & ST4.

Complementary Thumb Turns can be found in section ST7.



## Fixings

Supplied with 8mm x 110mm stainless steel lockpoint spindle and M6 grub screw (64mm max. door thickness); alternative spindle lengths and functions are available - see pages ST6:070 & 080.

Installation instructions supplied.

## How to Order

Split Finish Sets - order as singles

1) select LEVER (e.g. **7730**)

**PLEASE NOTE:** To work with Sprung Rosettes, the Lever needs to be machined to fit and 'SPG' must be added to the code eg. 7730SPG/...

2) add FINISH (e.g. **7730PC**)

If single lever only required add HANDING (e.g. **7730PC/RH**).

For single lever as exterior pairing with a CREMONE BOLT add CM to code (e.g. **7730PC/RH/CM**) - see DB3:200.

Backplates and Rosettes ordered separately - see sections ST3 and ST4.

**Finishes** - See our price list or website for finish availability.

